

DRAWBARS OPTION - SWIVEL HEIGHT ADJUSTABLE

This bulletin details the optional drawbars available for the R52-11TC, RS48-11 & GR11000. Both drawbar options are height adjustable - see the following images for the height differences.

INSTRUCTIONS FOR USING THE SWIVEL HEIGHT ADJUSTABLE DRAWBAR

PREPARING TO USE THE ROLLER


- 1. Remove pin from towing hitch of the towing vehicle.
- 2. Move roller away from towing vehicle.
- 3. Tilt roller such that the rear of the machine is in contact with the ground.
- 4. Remove pin from the drawbar and rotate the front section of the drawbar 180 degrees so that the hitch point is above the level of the trailer arms.
- 5. Replace the pin into the drawbar, ensure the lynch pin is also replaced to prevent the pin from falling out when the trailer is in the raised rolling position.
- 6. While pressing downward on the drawbar release the trailer latch.
- 7. Slowly and carefully raise the trailer up and over into the rolling position.

PREPARING TO TOW THE ROLLER

- 1. Lower the trailer and ensure it is correctly latched to the body of the roller.
- 2. Tilt roller such that the rear of the machine is in contact with the ground.
- 3. Remove pin from the drawbar and rotate the front section of the drawbar 180 degrees so that the hitch point is below the level of the trailer arms.
- 4. Replace the pin into the drawbar, ensure the lynch pin is also replaced to prevent the pin from falling out when the roller is being towed.
- 5. Attach the drawbar to the towing vehicle and insert the pin.



DRAWBARS OPTION - SWIVEL HEIGHT ADJUSTABLE

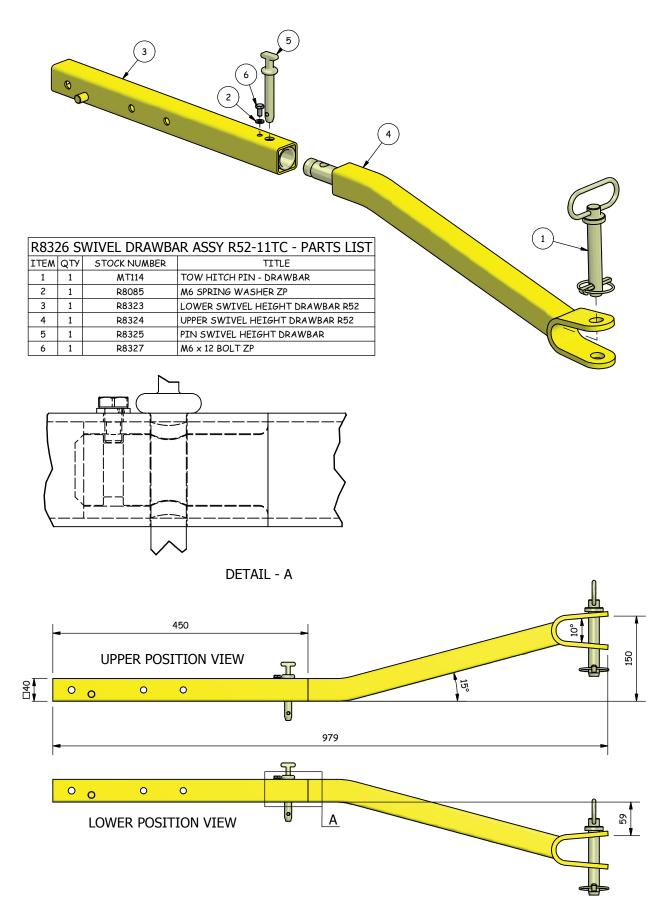



DRAWBARS OPTION - SWIVEL HEIGHT ADJUSTABLE

