

## RS48-11B TRU-TURF EQUIPMENT NOV '04

Number	SPARE PARTS LIST	USE
R5005	Bracket; Arm Rest Support	
R5007	Seat; Pan; P2 incl 3 Cleats	
R5009	Grip; Hand; Joystick	
R5010	Bearing; 6304	
R5011	Pedal; Foot	
R5012	Pad; Rubber; Foot Pedal	
R5013	Lever; Spiker Handle	
R5014	Grip; Lever; Spiker and/or Brake Handle; 12mm x 90mm	
R5016	Rubber part; Catch; Cover; Transmission & Seat	
R5020	Ball Coupling; 50mm; Optional	
R5028	Bearing; 6205; 25 ID 52 OD To Suit R5027 Wheel & R6042 Smoothing Tube	
R5031	Coupling; Rubber	
R5033	Fan	
R5037	Sprocket Assy; Simplex; 12Tooth; Inc. R5050 Bearing; R5188 Sprocket; R5180 & R5183 Circlips	
R5039A	Bush, Taper Lock; 30mm; 2012; for R5141 Sprocket 27 Tooth	
R5046	Rod Unit; Arm; Foot Pedal-Yoke; Transmission inc. 1 x R5184 Rod; 2 x R5118 Rod Ends; 2 x 3/8" Nut	
R5049	Spring; Steering Return & Catch	
R5050	Bearing; 6000	
R5054	Arm; Spiker Engaging	
R5055	Bearing; 6201; Arm; Spiker Engaging	
R5056	Frame; "H"; Spiker	
R5057	Arm; Bearing Carrier; Spiker Frame	
R5058	Bearing; B4	
R5059	Spring; Return; Spiker Frame	
R5060	Housing; P204; For B4 Bearing	
R5061	Strap; Mud Flap	
R5062	Shaft; Hexagon; Spiker; With Stop Collars	
R5064	Spacer; Set; Spiker Shaft; 8 x 63mm + 1x78mm	
R5065	Spring; Spiker Spacer; Fits On Hex Shaft	
R5066	Roller; Drive; suits RS48; RS48-11; RS48-11B	
R5067	Housing; F205; LF205 4 Hole; For R5070 B5 Bearing	
R5068	Housing; LFL5J; F205; 2 Hole; For R5070 B5 Bearing	
R5069	Bearing; 6006; Fits R5057 Bearing Carrier Arm	
R5070	Bearing; B5; 25MM	
R5071	Mudflap 150mm X 160mm	
R5073	Rod Unit; Steering Arm to Smoothing Head; Incl. 2 x R5118 Rod Ends; 1x R5185 Rod; 2 x 3/8" Nuts	
R5074	Bracket; Swivel; Smoothing Head; Incl. Plastic Plugs 40x40	
R5075	Bush; Nylon; Black; 27x16.9x32mm	
R5077	Housing; LFL6J; LF206 For R5078 B6 Bearings	
R5078	Bearing; B6; 30MM	
R5084	Rod Unit; 560mm; Connecting Smoothing Heads; Incl. 1 R5194 Rod; 2 x R5118 Rod Ends & R5187 Tube & 2 x 3/8" NF ZP Hex Nuts	
R5085-1	Shim; 1mm Thick; Honda Engine	
R5085-2	Shim; 2mm Thick; Honda Engine	
R5085-3	Shim; 3mm Thick; Honda Engine	
R5087	Key; Woodruff; 8mm x 30mm	
R5089	Key; Woodruff; 3/16"; For Joystick prior to "B" Series & in Eaton 11 Trans Coupling	
R5091	Engine; 5.5 HP; Honda; GX160 LX2; LX4; LXU	
R5092	Bush; Nylon; Red; Smoothing Head; Swivel	
R5094	Spring; Arm; Chain Tensioner; 90mm x 13mm x 1.5mm	
R5095	Washer; Capped; Starlock; 16mm	
R5096	Arm; Foot Pedal; For Eaton 7 & 11 Transmission	
R5099	Bush; Bronze; For Chain Tensioner Arms	
R5100	Mount; Swivel; Smoothing Head - For Pivot Shaft; Supply R5104 Pivot Shaft	
R5104	Shaft; Pivot; To Suit R5092 Bush; Red; Nylon; In R5074 Bracket	
R5108	Ball Fitting; Small Flange; Strut; Foot Pedal; 10mm Dia. M8 Thread	
R5109	Retainer; Clip; For R5115 Strut Cup End 13mm	

R5111	Retainer; Clip; For R5114 Strut Cup End 10mm	
R5113	Washer; Flat; 24x44x2mm;Suits only R5028 Bearing	
R5114	Cup End; Standard;Strut; 10mm Dia. Ball; Foot Pedal	
R5118	Rod End; 3/8" UNF; For Threaded Rod (part Rod Units R5084;R5046;R5073)	
R5119	Light; 3" x 5"; 50 Watt	
R5120	Coil; Lighting; ZE1 711; For Honda 4HP & 5.5 HP	
R5121	Flywheel; Honda 5.5 HP; ZE1 811	
R5122	Bolt; Flange; 6 x 28; Coil; 883 000	
R5123	Switch; Light	
R5124	Harness; Wire; Incl. Tube	
R5125	Bracket; Lights; For Light Kit	
R5126	Bracket; Switch; For Light Kit	
R5127	Light Kit; Optional	
R5129	Meter; Hour/Tach	
R5131	Bracket; Transmission; Eaton 11	
R5132	Arm; Chain Tensioner;One Only	
R5133	Transmission; Eaton 11	
R5136	Sprocket 11T 08B2 17mm 1/2BS FHT Duplex	
R5137	Chain;Assembly; Incl R5138 Joiner; Duplex; Eaton 11 Transmission	
R5138	Joiner; Chain; Duplex Eaton 11 Transmission	
R5139	Coupling; Transmission; Eaton 11 Honda 5.5 hp or Kohler 6 hp	
R5140	Coupling; Short; Engine; Honda 5.5 hp or Kohler 6 hp to Eaton 11 Transmission	
R5141	Sprocket; 27Tooth; Duplex; With R5039A 2012 Taper Lock Bush; Drive Roller; Eaton 11 Transmission	
R5142	Cushion; Rubber; For Engine Base Plate	
R5143	Tank; Stainless Steel; Transmission Oil; 5.2 Litre;Incl R5145 Drain Plug	
R5144	Breather; Tank; Transmission Oil	
R5145	Plug; Drain; Tank; Transmission Oil	
R5146	Housing; Filter; Tank; Transmission Oil	
R5147	Cartridge; Filter; Tank; Transmission Oil	
R5148	Gauge; Sight; Tank; Transmission Oil	
R5149	Plate; Mounting; Engine	
R5152	Pipe; Oil; B	
R5153	Pipe; Oil; C	
R5154	Pipe; Oil; D	
R5155	Bush; Taper Lock; 30mm; Use R5039A	R5039A
R5156	Key; Woodruff; 1/8" x 5/8"; Fits R5171 Yoke;R5136 Sprocket;R6009 Shaft;Steering	
R5158	Rubber Strip; Frame; Seat	
R5159	Rubber Strip; Rest; Trailer	
R5162	Engine; Kohler; 6 HP	
R5164	Woodruff Key 4 x 6.5mm	
R5165	Scraper; Wire; 600mm; Set of 6	
R5168	Spacer; Stainless Steel; Strut End; Transmission	
R5169	Cup End; Long; 13mm Dia.; For R5173 Transmission Strut	
R5170	Bolt; Adjuster; M8 x 1/2" HEX x 40mm Incl. M8 Nut; For R5173 Transmission Strut	
R5171	Yoke; Eaton 11 Transmission; Suits Rear Struts	
R5173	Kit; Strut; Spec301002Q0; Connects To R5171 Yoke or R5172 Yoke; Incl. 3 x M8 Nuts; 1 x 5/16" Spring Washer; 1 x R5108 Ball Fitting; 1 x R5111 Clip; 1 x R5114 Cup End; 1 x R5170 Adjuster Bolt; 1 x R5109 Clip; 1 x R5168 Spacer; 1 x R5169 Cup End; 2 x 5/16"	
R5177	Pipe; Oil; Kit; 4 Pipes R5152, R5153, R5154, R5178	
R5178	Pipe; Oil; A; Used With R5173 Strut	
R5179	Ball Fitting; Large Flange; 13mm; M8 Thread	
R5183	Circlip Internal 1.0" 25.4mm	
R5184	Rod; 3/8" x 70mm; Connects Foot Pedal Arm To Transmission Yoke	
R5185	Rod; 3/8" x 270mm; Connects Steering Arm To Smoothing Head; RS48/RS48-11	
R5187	Tube; 12.7mm x 495mm; For R5084 Rod	
R5188	Sprocket Only;12Tooth;SupplyR5037SprocketKit	R5037
R5189	Spiker Blade; 8 Point	
R5194	Rod; 3/8" x 570mm; Connects Right & Left Smoothing Heads;Part R5084	
R5195	Key;32.5mm x 5mmx5mm;Honda/KohlerEngines	
R5197	Rubber Strip;Oil Tank Base;50x25x3 Neoprene	
R5202	Strut; Spec 031103;32mm dia. Bare;Supply R5210	
R5203	End; Bolt Type; Strut; Trailer; M10 Thread; Incl. M10 x 40 Bolt & M10 Nut	

R5204	Bolt & Nut;M10x40;M10 Hex Nut	
R5208	Bolt; 3/8"x1"UNF Hex Head	
R5209	Washer; 3/8" Spring	
R5210	Strut - Trailer - Spec 031103;32mm dia.;Comprises R5202 Strut (Bare) + 2 x R5203 Ends + 2 x M10 x 40 Bolts + 2 x M10 Nuts	
R5211	Screw;3/8" x 1" UNF CSK	
R5212	Nut; 3/8" UNF	
R5213	Clip; Steel;Pinch Cleat; Seat	
R5216	Joiner; Chain; Duplex; Half Link	
R6000	Body; Main	
R6001	Catch; Trailer	
R6002	Frame; Seat	
R6003	Base Plate; Seat	
R6004	Smoothing Head; Front - Complete	
R6005	Smoothing Head; Rear - Complete	
R6006	Lever; Emergency & Park Brake	
R6007	Plate; Brake	
R6008	Joystick; Adjustable	
R6009	Shaft; Steering	
R6010	Bush; Bronze; 22x28x30;For Trailer Arm	
R6011	Spring; Compression;Park Brake	
R6012	Arm; Steering	
R6013	Stop; Rubber, Smoothing Head	
R6015	Plate; Footrest; Checkerplate;295 x 604mm	
R6017	Pin; Safety, Drawbar	
R6018	Arm; Trailer, Left Hand	
R6019	Drawbar - Pin Type	
R6020	Circlip; External; 7/8"; 22mm	
R6021	Plate; Serial Number RS48-11B	
R6022	Plate; Spiker Lever	
R6023	Plate; Emergency & Park Brake	
R6024	Plate; Move Right	
R6025	Plate; Move Left	
R6026	Hub; Trailer	
R6027	Seal; Hub Inner	
R6028	Bearing; Hub Inner	
R6029	Bearing; Hub Outer	
R6030	Washer; Hub	
R6031	Nut; Stub	
R6032	Pin; Cotter; Stub; M4 x 40	
R6033	Cap; Hub	
R6034	Nut; Wheel, Hub	
R6035	Hub; Wheel Complete	
R6036	Armrest LH	
R6037	Armrest RH	
R6038	Cover; Transmission;RS48-11B;incl Mesh	
R6039	Wheel & Tyre;4 Stud	
R6040	Sticker; Sloping Greens	
R6041	Sticker; Danger, Cover Removal	
R6042	Tube; Smoothing Head; 574mm x 60mm	
R6043	Tube; Smoothing Head. Includes 1 x R6042 Tube; 2 x R5028 Bearings; 1 x R6047 Shaft; 2 x R5113 Flat Washers; 1 x R5208 Bolt; 1 x R5209 S/Washer; 1 x R5211 CSK Screw	
R6044	Arm; Trailer, Right Hand	
R6045	Bush;Sprocket;Shaft Extension Eaton 11	
R6046	Drawbar;Optional; To Suit Ball Coupling R5020	
R6047	Shaft; Smoothing Rollers; Stepped 30mm to 25mm	
R6048	Scraper Rod 590mm x 6mm to suit RS48-11B from Serial No. R... on	
R6049	Hand Brake Handle;Retro;Right-angled Extension	